


**NOTE:** Consult the Directions For Use included with monitor for complete instructions, troubleshooting, and safety information

## MONITOR SETUP




**1** Open the battery compartment:

1. Install three AA Batteries
  2. Close cover and secure screw
- Optional: connect an AC adaptor to extend battery life.

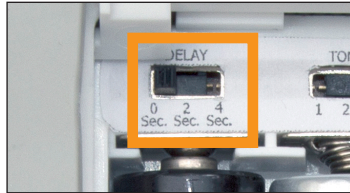

**2** **DELAY SETTING**

The DELAY switch controls the amount of time (three options: 0, 2 or 4 seconds) between when the patient removes themselves off of the pad and when the monitor alarms.

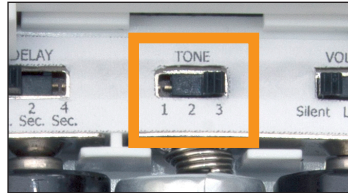

**3** **TONE SETTING**

The tone switch allows the caregiver to select between one of three tone options: single beep, double beep or triple beep.



**4** **VOLUME SETTING**

The VOLUME switch has three different sound levels; HI, LO and SILENT (alarm will be silent when connected into nurse call and set to SILENT).

## USE




**1** **CORDED PAD CONNECTION**

Wrap the sensor pad cord around strain relief, and then connect to the PAD CORD INPUT receptacle on monitor.

**NOTE:** All corded sensors are identified as OTHER in the SENSORS section of the monitor

**NOTE:** Corded and cordless pads cannot be used at the same time. When a corded pad is connected, it overrides the cordless pads.

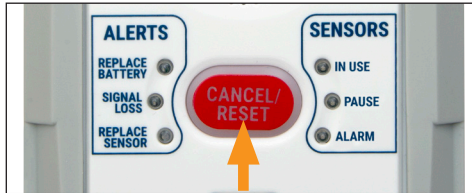

**2** **TEST THE ALARM**

1. When pressure is placed and held back on the pad, the BED, CHAIR or OTHER LED in the SENSORS section, will blink two times and then continuously every three seconds indicating the pad is in use.
2. Remove pressure from the pad to activate the audible alarm. The BED, CHAIR or OTHER LED in the SENSORS section, will blink yellow.
3. To cancel the alarm, press the monitor's CANCEL/RESET button or place pressure back on the sensor pad.




**3** **MOUNT THE MONITOR**

Securely mount the BC300, then connect the AC power cord and plug it into the power receptacle. The BC300 includes two mounting options:

1. A plastic strap to attach it to a wheelchair or side rail .
2. A plastic clip to connect it to the included wall bracket.




Also available are a metal wall bracket, bed bracket, and magnetic bracket.

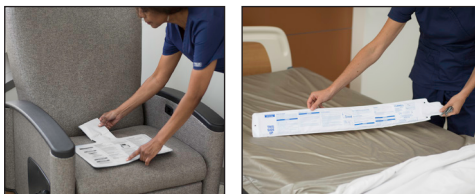

**4** **POSITION THE SENSOR PAD** on the chair or bed as instructed/illustrated on the pad.

If you're using Curbell's Under-Mattress Sensor Pad on a stretcher, the pad can be positioned in three ways. For early detection, position it under the shoulder blades.

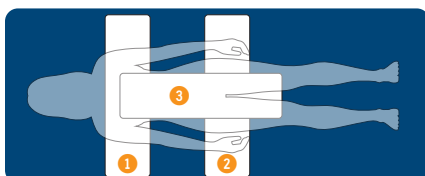

**5** **NURSE CALL CONNECTION**

Plug a nurse call connection cable into the NURSE CALL jack, connect the opposite end of the cable into the nurse call station (an adaptor may be required) and test.



**6** **PAUSE MODE**

1. While patient is on the pad, press the PAUSE button on the upper left hand corner of the face of the monitor to enter the 60 second pause mode.
2. The patient may be removed from the sensor pad within the 60 second window of time without activating an alarm.

## TROUBLESHOOTING CHECKLIST

This checklist has been developed to help identify common issues that can be quickly addressed to prevent unnecessary product returns. Please also refer to the product's Directions for Use. If, after completing the checklist, the product continues to malfunction, please call your Curbell Representative at 888-222-2188.

### The green sensor light does not blink when in use

- Batteries are installed according to the diagram in the battery compartment.
- Batteries are fresh and/or known to be good.
- Under the ALERT section the REPLACE BATTERY LED is flashing red. (Batteries have fully expired and must be replaced with 3 new Energizer Industrial (or equivalent) batteries).

### Reset button does not cancel the alarm

- Under the ALERTS section the REPLACE BATTERY LED is flashing red. (Batteries have fully expired and must be replaced with three new Energizer Industrial (or equivalent) batteries).
- Under the ALERTS section the REPLACE SENSOR LED is Flashing red (sensor has fully expired and needs to be replaced).

### No alert is given to the facility's nurse call system

- The connection between the monitor and the nurse call patient station is securely connected and not damaged (a 1/4" mono nurse call jack and/or an adaptor for compatibility is required).

## BC300 ALERT LIGHT INDICATORS

### ■ "REPLACE BATTERY" LED blinks red and the monitor "chirps"

- Replace all batteries with new Energizer Industrial (or equivalent) batteries.

### ■ "SIGNAL LOSS" LED flashes yellow

- Make sure that the cord from the sensor pad is securely connected to the monitor
- Make sure that the breakaway cord has been pushed in fully until it clicks.
- If a Nurse Call cable is being used, make sure that the nurse call cable is securely connected to the monitor
- If an AC adapter being used, verify that:
  - The connection between the monitor and the AC outlet is secure and not damaged.
  - The outlet in use is functioning properly and not controlled by a light switch.

### ■ REPLACE SENSOR LED is flashing red

- Replace expired timed sensor pad with new Curbell sensor pad.